

FRONT COVER

Honeywell

A-BUS™
Universal Remote



Operation Manual



A-BUS

Universal Remote

Honeywell

Introduction

Thank you for purchasing an A-BUS™ Universal Remote. Your remote has a dedicated A-BUS bank and six banks of buttons that can be encoded from the library of codes or codes which you can learn from the handsets belonging to the components you wish to control. Each button including bank buttons can learn macros (multiple commands). Once set up to your requirements it should make the operation of your system simple and functional. To program your devices, follow the instructions in "Programming a Device". For best results, please read and follow all the remaining instructions. Also, keep this guide for future reference.

Installing Batteries



Your A-BUS™ Universal Remote requires 2 AA batteries (Supplied) installed, please remove battery isolation tab before operation.

Battery Use and Safety

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the remote for an extended period, remove the batteries. They can leak chemicals that can destroy electronic parts.

WARNING: Dispose of old batteries promptly. Do not burn or bury them.

To Install Batteries:

1. Open the battery compartment cover (located on the back of the remote).
2. Place the AA batteries in the compartment and match the + and – polarity symbols inside with the symbols on the batteries.
3. Replace the cover.

A-BUS
Have You Heard It?

PAGE 2

A Quick Look At The Controls

- 1 Select a device.
Turn the selected device on or off.
- 3 Program sequences.
Select the next or previous channel.
Select next or previous chapter on some models of DVD players.
- 5 Press "LAST" to recall the last-viewed channel.
Raise or lower the sound level.
- 7 Press "MUTE" to turn the sound off or on.
Move the cursor in the menu screens.
Press "SELECT" to choose the highlighted menu option.
- 9 Skip backward, rewind, fast forward, skip forward, stop, pause, or play tracks on the current disc.
View the current channel and program information (if available).
- 11 Display the Menu for the selected device.
Exit the selected devices menu, guide or program without making a menu selection.
- 13 Display the program guide for the selected device.
- 14 Switch the TV's, VCR's, SAT's or DVD's input to view TV or video programs.
- 15 Directly enter channels (for example, 09 or 31). Press "ENTER" to send channel number entries on some TV models.
- 16 Dedicated A-BUS section, "MUTE", "ALL OFF", source selection "1", "2", "3" and "4", volume "UP" and "DOWN".
- 17 In the CBL/SAT, VCR, or DVD modes, the PVR/DVR Keys as follows:
 - o Press the "RED" button to instantly replay the last 7 seconds of a program you are watching (if the feature is available).
 - o Press the "GREEN" button to switch between live TV and video programming (if the feature is available).
 - o Press the "YELLOW" button to open the PVR menu.
 - o Press the "BLUE" button to skip past commercials or other uninteresting scenes (if the feature is available).
 - o In the DVD or CD mode, press the "BLUE" button to change discs.
 - o The A-BUS™ Universal Remote also comes with the Australian Foxtel Digital codes in it's library which utilizes these four buttons.
 - o Also available for easily identifiable macro buttons.

Programming A Device

To control TV, VCR, DVD and CD players, Cable and Satellite Receivers, and Amp/Tuner, follow these steps. Before proceeding, find the codes for the devices you wish to program in "Manufacture's Codes" on pages 7,8,9 & 10 of this manual and write them down in the section below or highlight them for your reference.

NOTE: Any device may be set up on any mode key.

1. Turn on the device (for example, DVD player) and, if needed, load media (for example, a DVD).
2. Press a device key (AMP, SAT, TNR, CD, AUX or DVD).
3. Press and hold "SETUP" until the red LED blinks twice, then release.
4. Enter the first five digit code for your device. The LED blinks once as each digit is entered. If the code is correct, the LED blinks twice.

NOTE: If the LED does not blink twice, repeat steps 2 to 4 and try entering the code again.

5. Aim the remote at the device and press Power. The device should turn off. If it does not, repeat steps 3-5, trying each code for your brand until you find one that works. If you cannot find a code that works, see "Searching for Your Code".
6. Repeat steps 1 to 5 for the other devices you want to control. For future reference, write down each working device code below:

— — — — —	CD Code: — — — — —
— — — — —	AUX Code: — — — — —
— — — — —	DVD Code: — — — — —

PAGE 3

A-BUS

Universal Remote

Honeywell

Searching For Your Code

If your device does not respond to the remote after trying all codes listed for your brand, or if your brand is not listed, try searching for your code:

1. Press a device key once.
2. Press and hold "SETUP" until the red LED blinks twice, then release.
3. Enter "991". The LED blinks twice.
4. Enter the device group number:

Code	Device Group
0	Cable (Cable Converters, Video Accessories, Satellite Receivers)
1	TV (TVs)
2	VCR (VCRs, DVD players)
3	Audio (Audio Amplifiers, Audio Amp/Tuners, CD players)

5. Select a test function, such as Power or Play. The remote sends IR codes from its library to the selected device, starting with the most popular code first.
6. If the device responds, go to step 7. If the device does not respond press "CH+". The remote will try the next code. Continue until the device responds.

NOTE: Press "CH-" to try the previous code.

7. To set the code, press "SETUP" once. The LED blinks twice.
8. To search for other device codes, repeat steps 1 to 6.

Checking The Codes

If you have set up the remote using the procedure in "Searching for Your Code", you may need to find out which four-digit code is operating your equipment.

For example, to find out which code is assigned to your AMP:

1. Press AMP once.
2. Press and hold "SETUP" until the red LED blinks twice, then release.
3. Enter "990". The LED blinks twice.
4. To view the code for the first digit, press "1" Count the LED blinks (for example, three blinks = 3), and write down the number in the appropriate code listing at the bottom of page 2 under "Programming a Device".

NOTE: If a code digit is 0, the LED does not blink.

5. Repeat step 4 for the three remaining digits, using 2 for the second digit, 3 for the third digit, 4 for the fourth digit and 5 for the fifth digit.
6. To check for other device codes, repeat steps 1-5, substituting the device key for AMP

Changing The Volume Lock

The A-BUS™ Universal Remote comes preset to allow independent volume control of each selected device (Global Volume Unlock). However, you may change the Volume Lock Setting to Global Volume Lock so that one device's volume will control volume in all other modes. After that, you can perform independent operation or Global Volume Unlock to remove all volume locking.

Locking Volume Control to One Mode (Global Volume Lock)

1. Press and hold "SETUP" until the red LED blinks twice, then release.



(cont...)

Changing The Volume Lock

2. Enter "993" and then press the mode key for the device you want to control volume (for example, AMP). The LED blinks twice. Now when you press "VOL+", "VOL-" or "MUTE", the selected device (for example, AMP) will control the volume regardless of the current mode.

Unlocking All Volume Control (Restoring Global Unlock)

1. Press and hold "SETUP" until the red LED blinks twice, then release.
2. Enter "993" and then press "VOL+". The LED blinks four times. Volume is independently controlled for all programmed devices.

Unlocking a Single Device's Volume Control

1. Press a device key (AMP, SAT, TNR, CD, AUX and DVD).
2. Press and hold "SETUP" until the red LED blinks twice, then release.
3. Enter "993" and then press "VOL-", The LED blinks four times. Volume is independently controlled for the selected devices.

System Design

A macro can be used to control a home theatre operation, to set a favorite channel, or for other multiple functions you would like to control with one key press. You can use any key to activate a macro. Moreover, each Macro Key can hold up to 32 key presses.

You can program a macro that will operate regardless of what mode you are in, or one that will only operate when you are in a specific mode.

NOTE: Programming a new macro over an existing one will erase the original macro.

Programming a Mode-Independent Macro:

1. Press and hold "SETUP" until the red LED blinks twice, then release.
2. Press "995". The LED will blink twice.
3. Press the key you want to use to activate your macro (Power, any unused key, etc.).
4. Enter the series of commands you want the macro to execute (up to 32 commands).
5. Press and hold "SETUP" until the red LED blinks twice, then release.

Now, when you press the Macro key, the remote will send the series of commands you have entered, regardless of what mode you are in. For example, you could program the Macro key to turn on both your TV and cable box and select a particular channel.

To clear the macro, repeat steps 1-5 above, but do not enter a series of commands at step 4.

Programming a Mode-Dependent Macro:

1. Press a device key (AMP, SAT, TNR, CD, AUX and DVD).
2. Press and hold "SETUP" until the red LED blinks twice.
3. Press "978". The LED will blink twice.
4. Press the key you want to use to activate your macro (Power, any unused key, etc.).
5. Enter the series of commands you want the macro to execute (up to 32 commands).
6. Press and hold "SETUP" until the red LED blinks twice, then release.

Now, when you press the Macro key, the remote will send the series of commands you have entered, but only if you are in the mode you selected in step 1. For example, you could program the Macro key to turn on both your TV and cable box and select a particular channel, but only if you are in TV mode. If you are in DVD mode, this key will do nothing.

PAGE 5

A-BUS

Universal Remote

Honeywell

(cont...)

System Design

Clearing a Mode-Dependent Macro:

1. Press and hold "SETUP" until the red LED blinks twice, then release.
2. Press "978".
3. Press the device key where you programmed the macro (AMP, SAT, TNR, CD, AUX and DVD).
4. Press the macro's activation key.
5. Press and hold "SETUP" until the red LED blinks twice, then release.

Using Learning

The A-BUS™ Universal Remote includes a learning feature so you can add functions that are unique to your home entertainment devices (e.g. VCR Tracking Up or Down). However, there are some considerations:

Learning Precautions

- Your original remote controls must be in working order for Learning to work properly.
- Learned keys are mode specific, so each one can store a unique function for each mode.
- Learned keys can be used in macros (see Using Macros).
- Do not use the following keys for learning : Device Keys or SETUP Key.
- Learning capacity is approximately 16 to 25 keys, depending on the code being learned.
- Certain device codes are not learnable including multi-frequency types, some high frequency ones, and other unusual formats.
- For optimum learning, avoid high levels of ambient light such as natural sunlight or energy-efficient fluorescent lights.

NOTE: Please have your original remote controls handy before programming learning.

Programming a Learned Key

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.


1. Press and hold "SETUP" until LED flashes twice.
2. Press "975".
3. Press a device key once (i.e., AMP, SAT, TNR, CD, AUX and DVD) to assign a mode for learning.
4. Place the A-BUS™ Universal Remote head-to-head about 2" (5cm) apart from original remote control.
Also locate the key (on your original remote control) that will serve as the teaching function.
5. On the A-BUS™ Universal Remote, press a key where the learned function will be stored.
6. On the original remote, press and hold the key to be learned. The A-BUS™ Universal Remote's LED will turn off. Continue holding the key on the original remote until the A-BUS™ Universal Remote's LED blinks twice.

NOTE: If the LED displays one long blink, a learning error has occurred. Try repeating this step again until a successful capture occurs. If the function is still not captured, press and hold "SETUP" to exit programming and review the "Learning Precautions" above. If needed, also see "Troubleshooting". After review, start programming again at step 1.

7. Repeat steps 2 through 6 for another device and/or key or press and hold "SETUP" to exit programming.

PAGE 6

Using Learning

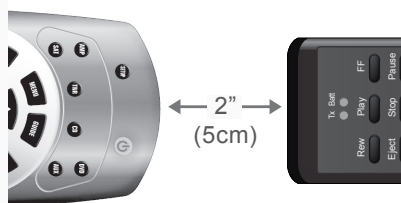

Deleting a Single Learning Key

1. Press and hold "SETUP" until the LED flashes twice.
NOTE: If more that 10 seconds pass between key presses, the remote exits programming.
2. Press "976".
3. Press the device key once (i.e., AMP, SAT, TNR, CD, AUX and DVD).
4. Press the key containing the learned function to be deleted twice. The remote LED blinks twice.
5. Repeat steps 2 through 4 for another key or press and hold "SETUP" to exit programming

Deleting All Learned Keys in a Specific Mode

1. Press and hold "SETUP" until the LED blinks twice.
NOTE: If more than 10 seconds pass between key presses, the remote exits programming.
2. Press "976".
3. Press a device key twice (i.e., AMP, SAT, TNR, CD, AUX and DVD) to clear all the learned keys for that mode. The LED blinks twice.
4. Repeat step 3 for another device key or press and hold "SETUP" to exit programming.

Troubleshooting

PROBLEM: LED does not blink when you press a key.
SOLUTION: Replace battery with two new AA alkaline batteries.

PROBLEM: LED blinks when you press a key, but device does not respond.
SOLUTION: Make sure the remote is aimed at your device and is not more than 15 feet (4.5m) away.

PROBLEM: LED blinks one long blink.
SOLUTION: An entry error has occurred (for example, wrong key). Try entry sequence again.

PROBLEM: Remote does not control devices or commands are not working properly.
SOLUTION: Try all listed codes for the device. Make sure the device operates with an infrared remote control.

PROBLEM: "CH+", "CH-", and LAST do not work for your RCA TV.
SOLUTION: Due to RCA's design from 1983 to 1987, only the original remote control will operate these functions.

PROBLEM: No volume on a device.
SOLUTION: See "Changing Volume Lock"

PROBLEM: Channels do not change properly.
SOLUTION: If the original remote control required you to press Enter to change channel, press Enter on this remote after entering the channel number.

Manufacturer's Codes

Audio Amplifiers

Accuphase 30382
Acurus 30765
Adcom 31100, 30577
Aiwa 30406
AudioSource 30011
Bel Canto Design 31583
Bose 30674
Carver 30269
Classe 31461, 31462
Curtis Mathes 30300
Denon 30160
Durabrand 31561
GE 30078
Harman/Kardon 30892
JVC 30331
Kenwood 30356
Korsun 31483
Left Coast 30892
Lennox 31561
Linn 30269
Logitech 31408
Luxman 30165
Magnavox 30269
Marantz 30892, 30321, 30269
Mark Levinson 31483
Nakamichi 30321
NEC 30264
Optimus 30395, 30300
Panasonic 30521, 30308
Parasound 30246
Philips 30892, 30269
Pioneer 30013, 30300
Polk Audio 30892, 30269
PS Audio 31523
RCA 30300
Realistic 30395
Sansui 30321
Shure 30264
Sony 30689, 30220, 30815
Soundesign 30078, 30211
Technics 30521, 30308
Victor 30331
Wards 30078, 30211, 30013
Yamaha 30354, 30143, 30133, 30504
YBA 31502

Audio Amp/Tuners

ADC 30531
Adcom 31616, 30616, 31617
Aiwa 31405, 30158, 30189, 31243, 31089, 31388, 30121, 30405, 31321, 31641, 31347
Akai 30224, 30076, 31512, 31255
Alco 31390
Amphion Media Works 31615, 31563
AMW 31563, 31615
Anam 31609, 31074, 30281
Apex Digital 31430, 31257
Arcam 31120
Audiophase 31387
Audiotronic 31189
Audiovox 31390, 31627
AVLight 30158
Bel Canto Design 31584
Bose 31229, 31253, 30639
Brix 31602
Cambridge Soundworks 31477, 31370
Capetronic 30531
Carver 31189, 30189, 30042, 31089, 30008, 30360
Casio 30195
Clarinet 30195
Classic 31352
Coby 31513, 31389, 31263
Compaq 31136
Criterion 31420
Curtis 31596
Curtis Mathes 30080

Daewoo 31250
Dell 31383
Denon 31360, 30004, 31104, 30771, 31311, 30273, 31142, 30301
Dynamic Bass 30360
Emerson 30424, 30255
Fisher 31409, 30360, 30219, 31801, 30042
Fonmix 31360
Fosgate 31487
Garrard 30424, 30281, 30463, 30146, 30440
Gateway 31517, 31567
GE 31379
Glory Horse 31263
Go Video 31532
GoldStar 30281
GFX 31299
Hafler 30146
Harman/Kardon 30110, 30189, 30891
Hewlett Packard 31181
Hitachi 31801, 31273
Initial 31426
Inkel 30027, 30062, 30502, 30491
Integra 30135, 31298
JBL 30110, 31306, 30281
JVC 30074, 31282, 31263, 31495, 31374
Kansai 30440
Kenwood 31313, 31570, 31569, 30027, 31051, 30077, 30313, 31027, 30042, 30239, 30569, 31052, 30186, 30314
KLH 31412, 31390, 31428
Koss 30424, 30255, 31366
Lasonic 31798, 31510
Lennox 31437
Lexicon 31076
Linn 30189
Liquid Video 31497
Lloyd's 30195
LXI 30181
Magnavox 31189, 31269, 30189, 30128, 30391, 30195, 31089, 31514, 30531
Marantz 31189, 31269, 30039, 30189, 31089, 31289, 30200, 30128
MCS 30039, 30346
Memorex 31596
Mitsubishi 31393
Modulaire 30195
Musicmagic 31089
NAD 30320
Nakamichi 30347, 30097, 31555
NEC 30235
Norcent 31389
Onkyo 30135, 31298, 30842, 30380, 31531
Optimus 31023, 30801, 31074, 30080, 30186, 30531, 30797, 30042, 30181, 30440, 30738, 30849, 30177, 30219, 30670
Oritron 31497, 31366
Panasonic 31518, 30039, 31548, 31764, 30518, 31350, 31763, 30367, 31316, 31509, 31633, 31288, 31363
Penny 30195
Philco 31390
Philips 31189, 31269, 30189, 31365, 31089, 31266, 31283, 30891, 31368, 30391, 31120, 31268
Pioneer 31023, 30150, 30630, 31184, 30080, 30531, 31084, 31384, 30244, 31343
Polaroid 31508
Polk Audio 30189, 31289

Proscan 31254
Qisheng 31609, 31390
Quasar 30039
RadioShack 31263
RCA 31023, 31609, 31254, 30346, 30531, 31154, 31511, 30080, 30530, 31074, 31390, 30054, 30360
Realistic 30195, 30181, 30163
Regent 31437
Rio 31869, 31383
Saba 31519
Samsung 31500, 31295
Sansui 30189, 30346, 30193, 31089
Sanyo 30801, 30360, 31469, 30219, 31251
Scott 30163, 30322
Sharp 31286, 30186, 31386, 31361
Sharper Image 31545, 31556, 30797, 31409, 31416, 31549, 31385, 31411, 31546, 31723, 31263, 31410
Sherwood 30491, 31423, 30062, 31077, 30502, 31653
Shinco 31390
Shinsonic 31426
Silsonic 30176, 31426
Sonic 30281
Sonic Blue 31383, 31869, 31532
Sony 31058, 31441, 31258, 31759, 30158, 31442, 31529, 31758, 31371, 31503, 31042, 31658, 31158, 31858, 31367, 31406, 31458, 30168, 31558, 31131, 31349, 31382
Soundesign 30670
Stereophonics 31023
Sunfire 31313, 30314, 30313, 31052
Tae Kwang 30440
Teac 30163, 31267, 31074, 31528, 30463, 31390
Technics 31308, 31518, 30039, 30518, 30309, 31309, 30208
Techwood 30281
Thorens 31189
Venturer 31390, 30849
Victor 30074
Wards 30158, 30189, 30080, 30054
Yamaha 30176, 30081, 31176, 31375, 30186, 31331, 31276
Yorx 30195
Zenith 31293, 30857, 30281, 31869

Cable Converters

ABC 00003, 00008, 00014, 00001, 00007, 00013, 00011, 00017
Allegro 00315, 00153
Americast 00899
Antronix 00207, 00022
Archer 00797, 00207, 00153, 00022
Belcor 00056
Bell & Howell 00014
Bell South 00899
Cable Star 00056
Cabletenna 00022
Cableview 00022
Century 00153
Citizen 00315, 00153
Clearmaster 00883
ClearMax 00883
Colour Voice 00025, 00031
Comtronics 00040
Contec 00019
Coolmax 00883
Daeryung 01877, 00877, 00477, 00008
Digi 00637
Director 00476

Dumont 00637
Eastern 00002
Emerson 00797
Everquest 00040, 00015
Focus 00400
Funai 00019
Garrard 00153
GC Electronics 00207, 00056
Gehua 00476
Gemini 00797, 00015
General Instrument 00476, 00810, 00276, 00003, 00014, 00011, 00015
Global 01327
GMI 00015, 00797
GoldStar 00144, 00040
Goodmind 00797
Hamlin 00009, 00273, 00034, 00020, 00259
Hitachi 00014, 00011
Hytex 00007
Jasco 00015, 00315, 00153
Jebsee 00400
Jerrold 00476, 00810, 00276, 00003, 00012, 00014, 00011, 00015
Leon 00015
LG 00144, 00040
Linsay 00440
Magnavox 00027
Memorex 00000
Motorola 00476, 00810, 00276, 01254, 01106, 01376
Movie Time 00156, 00063
MS 00015
MultiVision 00012
Novaplex 00618
NSC 00063, 00156
Oak 00019, 00007
Optimus 00021
Pace 01877, 00237
Panasonic 00000, 00008, 00107, 00040, 00021
Panther 00637
Paragon 00000
Philips 00317, 00027, 00025, 00153, 00013, 00031, 01305
Pioneer 01877, 00877, 00144, 00533, 01021
Popular Mechanics 00400
Pulsar 00000
Quasar 00000
RadioShack 00015, 00883, 00797, 00315
RCA 00021
Realistic 00207
Recoton 00400
Regal 00279, 00273, 00259, 00020
Regency 00002
Rembrandt 00011
Runco 00000
Samsung 00000, 00144, 00040
Scientific Atlanta 01877, 00877, 00477, 00008, 00017
Seam 00510
Signal 00040, 00015
Signature 00011
SL Marx 00040
Sony 01006
Starcom 00021
Starcom 00003, 00014, 00015
Stargate 00015, 00797, 00040
Starquest 00015
Supercable 00276
Supermax 00883
Sylvania 00001
Tandy 00258
Televue 00040
Texscan 00001
TFC 00310
Timeless 00040
Tocom 00012, 00013

Torx 00003
Toshiba 00000
Trans PX 00276, 00153, 00315
Tristar 00883
TS 00003
Tusa 00015
TV88 00063
Unika 00207, 00153, 00022
United Artists 00007
Universal 00153, 00056, 00207, 00022, 00191
V2 00883
Viewmaster 00883
Viewstar 00063, 00027, 00258
Vision 00883
Vortex View 00883
Zenith 00000, 00525, 00899
Zentek 00400

CD Players

ADC 30018
Adcom 30155, 30234
Aiwa 30157, 30124, 30012
Akai 30156
Audio Alchemy 30194
Audio-Technica 30170
BSR 30245, 30194
Burmester 30420
California Audio Labs 30029, 30303
Carrera 30194
Carver 30157, 30437, 30179
Classic 31297
Crown 30122
DAK 30245
DBX 30254
Denon 30873, 30003
DKK 30000
DMX Electronics 30157
Dynamic Bass 30179
Emerson 30305, 30164, 30155, 30469
Fisher 30179, 30174, 31325, 30088, 30342
Garrard 30245, 30420, 30393, 30280, 30425
GE 30009
Gemini 30625
Genexxa 30032, 30305, 30164
GoldStar 30417
GPX 31296
Harman/Kardon 30157, 30173, 31202, 30426
Hitachi 30032, 30155
Inkel 30196, 30180, 30437
Integra 30101
JVC 30072, 31294, 30655
Kenwood 30681, 30826, 30626, 30028, 30037, 30036, 30190
KLH 31318
Kodak 30287
Korsun 31484
Koss 31317
Krell 30157
Kyocera 30018
LG 31208
Linn 30157
Luxman 30093
LXI 30305
Magnavox 30157, 30305
Marantz 30026, 30029, 30157, 30180
Mark Levinson 31484
McIntosh 30287
MCS 30029, 30043
Miro 30000
Mission 30157
MTC 30420, 30625
Nakamichi 30147
NEC 30043, 30234
Nikko 30174, 30170, 30164, 30625
NSM 30157
Onkyo 30868, 30101
Optimus 31063, 30000,

PAGE 8

(cont...)

Manufacturer's Codes

30032, 30037, 30342, 30437, 31075, 30145, 30194, 30305, 30426, 30087, 30179, 30280, 30420, 30468, 30175, 30196
 Panasonic 30029, 30752, 30303
 Parasound 30420, 30194
 Philips 30626, 30157, 30287
 Pioneer 31063, 31062, 30032, 30305, 30468, 31087
 Polk Audio 30157
 Proton 30157
 QED 30157
 Quad 30157
 Quasar 30029
 RadioShack 31075
 RCA 31062, 30032, 30305, 30764, 30179, 30468, 30039, 30155, 30420, 30053
 Realistic 30164, 30180, 30155, 30179, 30175, 30420
 Rotel 30157, 30420
 SAE 30157
 Sansui 30157, 30305, 30202
 Sanyo 30179, 30087
 SAST 30157
 Scott 30305, 30164, 30155
 Sears 30305
 Shure 30861, 30037, 30180
 Sherwood 31067, 30196, 30180, 30426
 Shure 30043
 Silonic 30888, 30036
 Sonic Frontiers 30157
 Sony 30490, 30000, 31364, 30185, 30605, 30100, 30604
 Soundesign 30425, 30145
 STS 30018
 Symphonic 30305
 TAG McLean 30157
 TDK 30420
 Teac 30393, 30180, 30174, 30420
 Technics 30029, 30207, 30303
 Tivoli Audio 31553
 Vector Research 30194, 30417
 Victor 30022
 Wards 30157, 30053
 Yamaha 30888, 30036, 31367, 30170, 31072
 Yox 30461
 Zonda 30157
DVD Players
 Adcom 21094
 Advent 21016
 Aiwa 20641, 21912
 Akai 20899, 20770, 21975, 21089
 Allegro 20869
 Amphion Media Works 22016, 22007
 BOW 20872, 22016, 22001, 21176
 Anam 21913
 Apex Digital 20672, 20717, 20797, 21020, 21100, 20796, 21004, 21061, 21937, 20794, 20830, 21056, 21915, 20755
 Aspire Digital 21168
 Audiologic 20736
 Audiovox 21071, 21122, 21041, 21121, 21072
 Axion 2071, 21072
 B K 20662, 20655
 Bel Canto Design 21571
 Blaupunkt 20717
 Blue Parade 20575
 Brookson 20868, 20695
 Cambridge Soundworks 21916
 CAVS 21057
 Changhong 20627, 21061
 CineVision 20876, 20869
 Classic 21178
 Coby 20778, 21107, 21086, 21923, 20852, 21165
 Criterion 22007
 Curtis Mathes 21087
 CyberHome 21023, 21129, 20816, 21117, 21024
 Daewoo 20784, 20869, 20833, 21918, 21172, 20705
 Denon 20490, 20634
 Dual 21085, 21068
 DVD2000 20521
 Emerson 20591, 20675, 20821
 Enterprise 20591
 Fisher 20670, 21919
 Funai 20675
 Gateway 21077, 21073, 21158
 GE 20522, 20815, 20717
 Go Video 20744, 20869, 21099, 21970, 20715, 20833, 21075, 21730, 20783, 21044, 2114
 GPX 20699, 20769
 Greenhill 20717
 Harman/Kardon 20582, 20815
 Hitachi 20573, 20664, 21919
 Hitek 20672
 Initial 20717, 21931
 Integra 20627, 21924
 Jamo 22003
 Jaton 21978
 JBL 21026, 20702
 Jensen 21016
 JVC 20558, 20623, 21940, 21901, 20867
 JWIN 21051, 21049
 Kenwood 20490, 20534, 21063, 20682
 KLH 20717, 21939, 21149, 21020
 Konkak 20720, 20719, 20711, 20721
 Koss 20651
 Landel 20826
 Lasonic 20798, 21173
 Lennox 21938
 LG 20801, 21011
 Liquid Video 21980
 Lite-On 21158, 21058
 Loewe 20511
 Matsushita 20503, 20815, 21976, 21914, 20821
 Malata 21159, 20782
 Marantz 20539
 Memorex 20695
 Microsoft 20522
 Mintek 20839, 20717
 Mitsubishi 21152, 20521
 Momitsu 21081
 NEC 20785
 Nesa 20717
 Next Base 20826
 Nix 20224
 Norcan 21003, 20872, 21923, 21107
 Onkyo 20503, 20627, 21924, 20792, 21985
 Orrison 20651, 21980
 Panasonic 20490, 21462, 21907, 21910, 21990, 21362, 21762, 21909, 21986, 20632, 21490, 21908, 21925, 22017
 Philco 22000
 Philips 20503, 20539, 20885, 20854, 21914
 Pioneer 20525, 20571, 20638, 20632, 20631, 21902
 Polaroid 21086, 21061, 21998, 21200
 Polk Audio 20539
 Portland 20770
 Prima 21016
 Princeton 20674
 Proscan 20522
 ProVision 20778
 Qwestar 20651
 R1149 20522, 20571, 20717, 20812, 21193, 21974, 21132, 21965, 21022, 21913
 Regent 21938
 Rio 20869
 Rotel 20623
 Rowa 20823
 Saba 21977
 Sampo 20752, 20698
 Samsung 20490, 20573, 20820, 21932, 21075, 20899, 21979
 Sansui 20695
 Sanyo 20695, 20670, 21967, 20873
 Sharp 20630, 20752
 Sharper Image 21995, 21117
 Sherwood 21043, 20770, 20633, 21077
 Shinco 20717
 Shinosonic 20533, 20839, 21931
 Sigma Designs 20674
 Sonic 21086, 21839, 21970, 21909
 Sony 20533, 20864, 21033, 21904, 22020, 21903, 21981, 20772, 21934
 Sungale 21074
 Superscan 20821
 SVA 20717, 20860, 21105
 Sylvania 20821, 20675
 Symphonic 20675
 Teac 21984, 20809
 Technics 20490
 Technosonic 20730
 Teftwood 20692
 U.S. Digital 21031
 Theta Digital 20571
 Tivo 21996
 Toshiba 20503, 21154, 22006, 21045, 21996, 20695, 21988
 Tredex 20803, 20800, 20799, 20804
 TYT 20705
 Urban Concepts 20503
 US Logic 20839
 V Inc. 21226, 21064
 Vocopro 21027
 WAB 20815
 Xwave 21001
 Yamaha 20490, 20539, 20545
 Zenith 20503, 20591, 21906, 20869, 22002
Satellite Receivers
 AlphaStar 00772
 Chaparral 00216
 Crossdigital 01192
 DirectTV 00392, 00566, 00639, 01639, 01142, 01149, 01748, 01749, 00724, 00819, 01856, 01076, 01109, 00099, 01444, 01108, 01392, 01443, 01640, 01442, 01505, 01170
 Dish Network System 01005, 00775, 01775, 01505, 01170

(cont...)

Manufacturer's Codes

10463, 10154, 10236, 10363, 10180, 10178, 10171, 10280, 10623, 10038, 1911, 1944, 10179, 10019, 1909, 1929, 10185, 10282, 1905, 10039, 1928, 10177 Envision 10030, 10813 Epson 10833, 10840 Euer 10030, 10161, 10003 Feilu 10817 Feiyan 10264 Feiyue 10817 Firstar 10236 Fisher 10154, 10159 Fortress 10093 Fujitsu 10186, 10853, 10179, 10809, 10683 Funai 10180, 10171, 10242, 1904, 10179, Fun 10145, 10817, 10264 Futuretech 10180 Ganxin 10817 Gateway 17156, 17155 GE 11447, 10047, 11454, 10051, 10451, 10180, 10030, 10178, 10092, 11147, 1919, 10055, 10027, 1917, 10135, 10282, 11347, 10021, 11907, 1922 General 10186 Gibmar 10017, 10030, 10019 Gintai 11150, 10474 Go Video 10886 GoldStar 10154, 10030, 10178, 1926, 10019, 10037, 1910, 10001, 10032, 10056, 11150, 10039 Goodmans 10360 Grumpy 10180, 10179 Haier 1034, 10768 Haier 1034, 10817 Hakmark 10178 Hankook 10180, 10030, 10178, 10019, 10056, 10628 Harley Davidson 1904, 10179 Harmar/Kardon 10054 Harvard 10180 Havermy 10093 Hello Kitty 10451 Himitsu 10180, 10628 Hisense 10156, 10748, 10144 Hitachi 11256, 10156, 10030, 10178, 11145, 10145, 10038, 11245, 10092, 10027, 10381, 10036, 11150, 10056, 1904, 10151, 10165, 10019, 10186, 10032, 10039, 10157, 10016, 10179, 10474 Hongmei 10093, 1910, 10817, 10264 Hongyan 19817, 10264 Huanjun 10150 Huafa 10145 Huanghe 10817 Huangshan 10264, 10817 Huanxy 10179, 10817, 10264 Huaqiang 10264 Huari 10145, 10264 Huodateji 10051 Hyundai 10849 Imperial Crown 10001, 10391, 10264 Infinity 10054 Inteq 10017 Janeli 10046 JBL 10054 JCB 10000 Jean 10156, 10051, 10236, 10092, 10179, 10033, 10474 Jense 10761, 10815, 1933, 10817 Jiahua 10051 Jialicai 10264 Jinfeng 10051, 10817 Jinhai 1910 Jinque 10817, 10264 Jinta 10264, 1910 Jinxing 10054, 10156, 10445, 10264, 10037, 10051 Juhua 10817, 10264 JVC 10053, 10160, 1923, 11253, 10036, 10853 Kaige 10264, 10817 Kangchong 1910 Kangli 10001, 10817, 10391, 10264 Kangyi 10264 Kapyani 10052 KEC 10180 Kenwood 10030, 10019 KEH 10765, 10767 KLI 10031 Kloss 10046, 10024 Kolin 10180, 10053, 11150, 10036, 10474 Kongque 10264, 10817 Konka 10632, 10707, 1940, 10628, 10703, 1939, 10638, 10817 KTV 10180, 10030, 10185, 10039, 10280 Kualie 10264 Kunlun 10051, 10817, 10264 K 10060, 10030, 10178, 10056, 10442, 10856, 10001, 10038, 10700, 10019, 10037, 10474, 11178, 10003, 10032, 10006 Lihua 10817 Lloyd's 11904 Loewe 10136 Logik 10016 Longjiang 10264, 10817 Luxman 10056 Luzon 10047, 10054, 10154, 10156, 10178, 1913 Magnavox 11454, 10054, 10030, 10706, 1904, 10020, 1944, 10036, 10179, 10386, 1931, 10096, 10187, 11254, 1913, 10024, 10186 Magnin 1907 Majestic 10016 Mantz 1004, 10030, 10854, 10704, 11154, 10855 Maruman 10627, 10391 Matsushita 10250, 10050, 10161 Megapower 10700 Megatron 10178, 10145, 10003 MEI 10185 Meile 10264, 1910, 10817 Memorex 10154, 10463, 10150, 10178, 10179, 1920, 1927, 10016, 1911, 1926, 1924 Mermaid 10037 MGA 10150, 10030, 10178, 1907, 10019 Midland 10047, 10017, 10051, 10039, 10135, 10032 Minutz 10021 Mitsubishi 10154, 10250, 10093, 10236, 10180, 11250, 10150, 10030, 10178, 10381, 10836, 10033, 10179, 10817, 11150, 10474, 10019 10868, 10056, 1917 Monivision 10843, 10700 Motorola 10093, 10055 MTC 10060, 10030, 10185, 10019, 10056 Mudan 10051, 10817, 10264 Multitech 10180 NAD 10156, 10178, 10866 Nanbao 1910, 10264 Nansheng 10817, 10264 National 10051 NEC 10154, 10156, 10051, 10053, 10030, 10178, 10046, 11150, 10056, 10165, 10886, 10474, 10036, 10812, 10381, 10817, 11704, 10170, 10264, 10019, 10497 Newave 10093, 10178, 11150, 10092, 10161 Nikko 10030, 10178, 10092 Nikon 1910 Norcent 10748, 10824 Noshi 10019 NTC 10092 Onking 10280 Onwa 10180 Optimus 10154, 10250, 10166, 1924, 1913, 10650, 1927 Optoma 10887 Optonica 10093, 10165 Orion 10236, 10463, 1911, 1905, 10179, 11463, 1929 Parasonic 10054, 10250, 10051, 10161, 11410, 1927, 1947, 10037, 10055, 10650, 1924, 1946, 1919, 1941 Panda 10051, 10706, 10817, 10264, 1910 Penney 10047, 10156, 10051, 10060, 10030, 10178, 10135, 11347, 1926, 10018, 10027, 10039, 1919, 10003, 10021, 10032, 11907, 10019 Philo 10054, 10180, 10030, 10178, 10628, 10474, 10020, 10037, 10096, 10186, 10774, 10019, 10032, 10056 Philips 11454, 10054, 10000, 10051, 10030, 10178, 10474, 10019, 11154, 10092, 10187, 10774, 10024, 10037, 10056, 10186, 10690, 10020, 10032 Pilot 10030, 10019, 10039 Pioneer 10166, 10038, 10866, 10679 Portland 10092, 10039, 10019 Prima 10761, 10815, 1
--

PAGE 10

(cont...)

Manufacturer's Codes

11929	GOI 21944	20479, 20295, 21479	Systemax 21972	Toshiba 01272
Zonda 10003	GoldStar 20037, 20209, 20038, 20226, 20225, 21237	Panarex 21950	Tagar Systems 21972	Touch 01272
VCRs	Gradiente 20000	Panasonic 21062, 20035, 20162, 20077, 20226, 20616, 21162, 20225, 20367, 20227, 21035, 21262	Tashiko 20037	Viewsonic 01272, 01329
ABS 21972	Haojie 20240	Pansat 21950	Tatung 20045, 20067, 20041, 20366, 20008	ZT Group 01272
Admiral 20048, 20209	Harley Davidson 20000	Penney 20035, 20037, 20240, 20042, 20038, 21035, 20040, 20054, 21237	Teac 20000, 20041	
Adventura 20000	Harman/Kardon 20081, 20038	Pentax 20042, 20105	Technics 20035, 20162	
Aiko 20278	Harwood 20072, 20068	Philco 20035, 20000, 20226, 20479	Teco 20035, 20037, 20048, 20041, 20038, 20040	
Aiwa 20037, 20000, 20307, 20468, 20124, 20406, 20348, 20479	Hauptpaage 21992	Philips 20035, 20081, 20000, 20226, 20739, 21381, 20110, 20618, 21181, 20563, 21081, 21949, 20062	Teknika 20035, 20037, 20000, 20052	
Akal 20041, 20061, 20175, 20106	Headquarter 20046	Pilot 20037	Thomas 20000	
Alienware 21972	Hewlett Packard 21972	Pioneer 20042, 20067, 20058	Tivo 20739, 21957, 20636, 21956, 20618, 21503	
America Action 20278	Hi-Q 20047	Polk Audio 20081	TMK 20240, 20208, 20036	
American High 20035	Hitachi 20037, 20000, 20042, 20041, 20166, 20105, 20089	Profitronic 20240	Toshiba 20045, 20067, 20043, 20041, 20210, 20384, 21008, 21972, 20366, 20845, 21503, 20066, 20212, 20828, 21145, 20008	
Amoisonic 20479	Howard Computers 21972	Proscan 20060, 20760, 21954, 20202, 21060, 20761	Totevision 20037, 20240	
Anam 20162, 20037, 20240, 20278, 20226, 21037	HP 21972	Quasar 20035, 20162, 21035, 20077, 21162	Touch 21972	
Anam National 20162, 20226	HTS 21944	RadioShack 20000, 21037	UltimateTV 21989	
Asha 20240	Hughes Network Systems 20042, 21949, 20739	Radix 20037	Unitech 20240	
Audiovox 20037, 20278	Hyundai 21951	Randex 20037	Vector 20045	
Beaumarck 20240	iBUYPOWER 21972	RCA 20060, 20035, 20240, 20000, 20042, 20807, 21060, 21989, 20106, 20761, 21035, 20058, 21964, 21015, 20226, 20760, 20880, 21954, 20077, 20202, 20453	Vector Research 20038, 20040	
Bell & Howell 20104	Jensen 20041	Realistic 20035, 20037, 20048, 20047, 20000, 20104, 20066, 20046, 20062	Victor 20067, 20041, 20008, 20384	
Blaupunkt 20226	JVC 20045, 20067, 20041, 21945, 20008, 21944, 20384, 20366	ReplayTV 20614, 20616	Video Concepts 20045, 20040, 20061	
Broksonic 20184, 20121, 20209, 20002, 20348, 20295, 21479, 20479	KEC 20037, 20278	Ricoh 20253, 20034	White Westinghouse 20209, 20072, 20637	
Calix 20037	Kenwood 20067, 20041, 20038, 20384	Rinco 20039	XR-1000 20035, 20000, 20072	
Canon 20035, 21174, 20167	KLH 20072	Sampo 20037, 20048	Yamaha 20041, 20038	
Carver 20081	Kodak 20035, 20037	Sansky 20048, 20039	Zenith 20039, 20033, 20000, 20209, 20034, 20479, 21479, 21139, 20637	
CCE 20072, 20278	Kolin 20043, 20041	Sanso 20000, 20067, 20209, 20041, 20479, 20271, 21479	ZT Group 21972	
Changhong 20048, 20081	LG 20037, 20045, 20042, 20209, 20038, 22010, 21037, 20040	Sanyo 20047, 20240, 20104, 20046, 20159, 20369, 20368		
Citizen 20037, 20278, 21278	Lloyd's 20000, 20208	Scott 20184, 20045, 20212, 20043, 20210, 20212		
Colt 20072	Logik 20072	Sears 20035, 20037, 20047, 20000, 20042, 20104, 20046, 20066, 21237, 20054, 20105		
Craig 20037, 20047, 20240, 20072, 20271	LXI 20037	Sharp 20048, 20209, 20363, 20848, 20807, 20062, 20738, 21048		
Curtis Mathes 20060, 20035, 20162, 20041, 20760, 21035	Magnasonic 21278, 20593	Shinco 20000		
Cybernex 20240	Magnavox 20035, 20039, 20081, 20000, 20593, 20563, 20110, 21781	Shintom 20072		
CyberPower 21972	Magnin 20240	Shogun 20240		
Daewoo 20045, 20104, 20278, 20210, 20368, 21278, 20637, 20046, 20212, 20561	Marantz 20035, 20081, 21381	Singer 20072		
Dell 21972	Marta 20037	Sonic Blue 20614, 20616		
Denon 20042	Matsushita 20035, 20162, 20226, 21162, 20367, 20227	Sony 20035, 20032, 20033, 20000, 20253, 20639, 21232, 21972, 20636, 21032, 21957, 20034, 20586, 20640, 21956		
DirecTV 20739, 21989, 21954, 21949	Media Center PC 21972	STS 20042		
Dish Network System 21943, 21946, 21945, 21944	MEI 20035	Sunpak 20253		
Dishpro 21944, 21943	Memorex 20035, 20162, 20037, 20048, 20039, 20047, 20240, 20000, 20104, 20209, 21237, 20046, 20479, 21162, 20348, 21048, 21262, 20307, 21037	Sylvania 20035, 20081, 20000, 20043, 20110, 21781, 21593, 20593		
Durabrand 20039, 20038	MGA 20240, 20043, 20061	Symphonic 20000, 21593, 20593		
Dynatech 20000	MGN Technology 20240			
Echostar 21943, 21946, 21945, 21944	Microsoft 21972			
Electrohome 20037	Mind 21972			
Electrophonic 20037	Minolta 20042, 20105			
Emerex 20032	Mitsubishi 20067, 20043, 20041, 20061, 20807, 20173			
Emerson 20035, 20037, 20184, 20240, 20045, 20000, 20121, 20043, 20209, 20002, 20278, 20295, 20036, 20637, 21593, 20561, 21479, 20068, 20208, 20479, 21278, 20061, 20212	Motorola 20035, 20048			
Euro1 21962	MTC 20240, 20000			
Expressvu 21944	Multitech 20000, 20072			
Fisher 20047, 20104, 20066, 20054	NAD 20058			
Fuji 20035, 20033	National 20226			
Fujitsu 20045, 20052, 20366	NEC 20035, 20037, 20048, 20104, 20067, 20041, 20038, 20040, 20008, 20370			
Funai 20000, 20593, 21593	Newave 20037			
Garrard 20000	Nikko 20037			
Gateway 21972	Nikon 20253, 20034			
GE 20060, 20035, 20240, 21060, 20202, 20760, 21035, 20807, 20226, 20761	Noblex 20240			
General 20045, 20366, 20052	Northgate 21972			
Go Video 20643, 20526, 20432	Olympus 20035, 20226, 21046			
	Onkyo 20222			
	Optimus 21062, 20162, 20037, 20048, 20104, 21048, 21262, 20593, 21162, 20058, 20432			
	Optonica 20062			
	Orion 20184, 20209, 20002,			

BACK COVER



Specifications

Dedicated A-BUS Control buttons plus 6 Banks with Code Library and Learning Capabilities

A-BUS Buttons:	4 x Source Input, Volume Up/Down Off and All Off
Banks:	6 (All Bank Buttons will Learn Macros)
Buttons:	39 Keys per Bank (Not Including A-BUS)
Range:	< 50 feet (15m) (Depending on Source Component)
Code Library:	Extensive Infrared Code Library for Audio Video Products
Macros:	Any Button (Up to 32 Commands from any Other Button)
Batteries:	2 x AA batteries (Supplied)
Size (H x W x D):	1.4" (35 mm) x 2.6" (66 mm) x 8.4" (214 mm)

Additional Information

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the unit only in normal temperature environments.
 - Handle the remote gently and carefully. Don't drop it.
- Wipe the remote with a damp cloth to keep it looking like new.

The A-BUS™ Universal Remote does not contain any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your A-BUS™ Universal Remote. Modifying or tampering with the internal parts can cause damage and invalidate the warranty. If your remote is not performing as it should, please contact your place of purchase.

SPECIFICATIONS

Power: (2) AA

Size: (H x W x D) 8.43 x 2.64 x 1.38 in
(214 x 66 x 35 mm)

Weight: (w/o batteries) 5.6 oz (158.76 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without any notice.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been verified to comply with the limits for a class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

07A02 M66400